

HOUSE ASSEMBLY- MODEL A STYLE

MATERIALS: WHITE/YELLOW GLUE, SANDPAPER, MASKING TAPE.

A

NOTE: SMALL PARTS PARCEL CONTAINS CHIMNEY SET, NAILS, SCREW, DOOR CORNICE, 5 WILL PIECES, 10 SHUTTERS & W. PANES

SHELL ONLY:

SAND ROUGH EDGES LIGHTLY.

INSTALL FLOORS TO SIDES AS FOLLOWS:

INSTRUCTIONS ARE FOR ASSEMBLY ONLY. PAINTING MAY BE DONE, OF COURSE, IN STAGES, ESP. WHEN A VARIETY OF COLOR IS USED.

CAREFULLY SLIDE DOVETAILED FLOORS INTO SIDE GROOVES. GLUING OPTIONAL W/DOVETAIL.

GLUE & NAIL BOTTOM FLOOR IN GROOVES. THIS MUST BE DONE FOR STABILITY.

SLIDE 1ST AND 2ND FLOOR PARTITIONS IN PLACE.

GLUE AND NAIL HOUSE FRONT IN PLACE.

GLUE STAIRS IN PLACE. NOTE: IF PLANNING TO INSTALL STAIR RAILINGS, GLUE LIGHTLY SO THAT STAIRS MAY BE REMOVED FOR WORKING CONVENIENCE.

NOTE:
FLOORS ARE MARKED 1, 2 AND 3 ON FRONT EDGES

INSTALLING ROOF:

WITH BEVELED EDGE DOWN, TAPE ROOF PARTS TOGETHER AS SHOWN IN DIAGRAM (SHEET #2)


TURN TAPED ROOF OVER AND APPLY GLUE TO BEVELED EDGES.

NEXT, WITH TAPE ACTING AS A HINGE, SET ROOF ASSEMBLY IN PLACE.

IMPORTANT: OVERHANG AT GABLED ENDS SHOULD MEASURE 15/16 OF AN INCH. ATTIC PARTITIONS MAY BE NOW GLUED IN DESIRED PLACE.

ASSEMBLE CHIMNEY. GLUE IN PLACE.

REVISED INST.

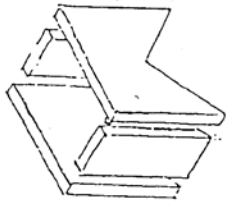

CHIMNEY

REAR ROOF

3RD FLOOR

THREE MARKS

INK MARK

INK MARK


NARROW STEP AT TOP

OPTIONAL BATHROOM PARTITION

TWO MARKS
2ND FLOOR

ONE MARK
1ST FLOOR


NAIL HOLES STARTED

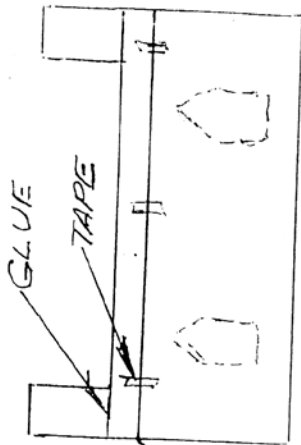

ROOF ASSY.

BEVEL DOWN

CUT-OUTS - DORMER MODELS ONLY

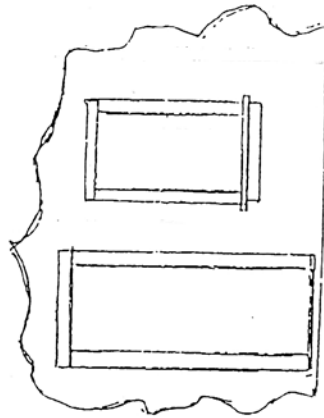

INSIDE TRIM

